


# Way6 Ticket Machine

The new ticket machines should be largely familiar to you: there are a few small changes to where you find tickets, and it is now easier to access and change the ticket roll. This guide details the changes.


## Ticket Menus

The Ticket Menus now use colour to help you find ticket menus, and can be navigated by scrolling right or left – a bit like on a phone:

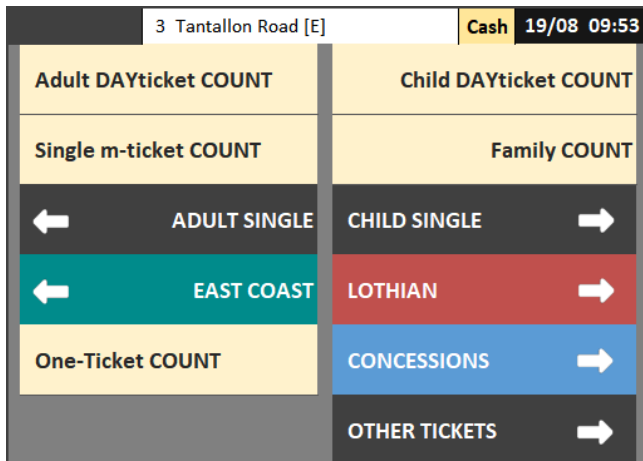


### MAIN MENU

The most frequently used counts, as well as Single Ticket, Day Ticket (EastCoast and Lothian), and Concession menus.

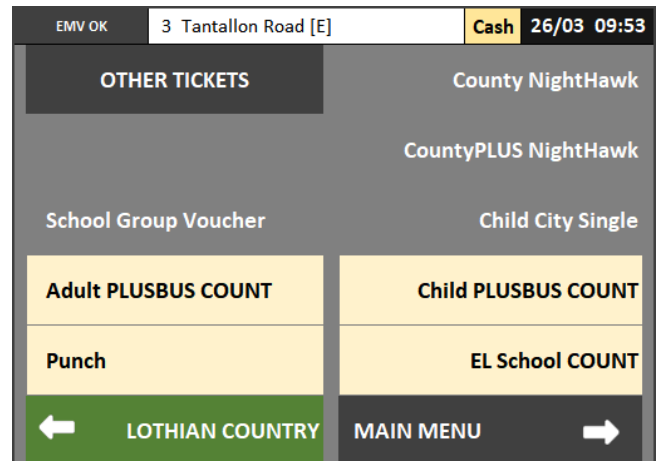


### OTHER TICKETS

Less frequently used tickets/counts, as well as a menu to LothianCountry Day Tickets.

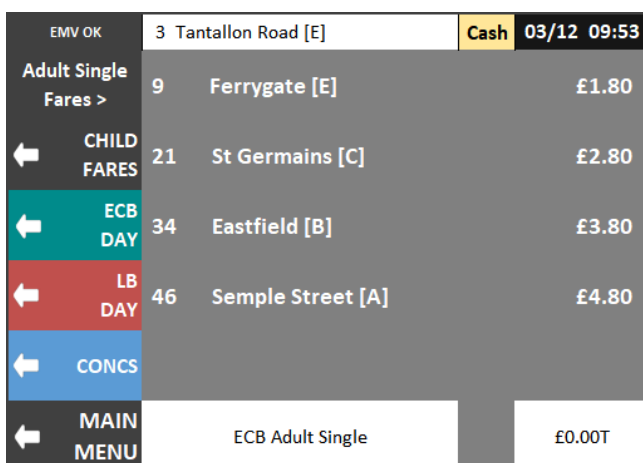

### ADULT SINGLE MENU

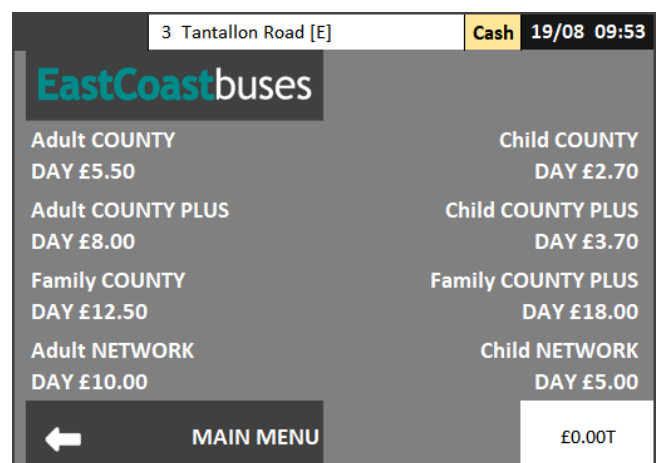

### EASTCOAST MENU

If you need to restart the ticket machine, press and hold the Wayfarer Reset switch for at least 30 sec – or until the display and lights turn off. The ticket machine will then restart.

## Changing the Ticket Roll

The ticket roll is now accessed from above, just press the PARKEON lid release button above the screen. To change a ticket roll follow the instructions below:

**1** Release the paper by sliding the locking lever to the right, and then carefully pull the paper out of the printer.

**2** To remove the old ticket roll, push it away from you until the square peg is released. Then pull up.


**3** Insert the new ticket roll with the square hole nearest you.

**4** Push the ticket roll down against the round spring-loaded peg. Check the square peg is lined up with the square hole before releasing.

**5** Slide the paper into the printer until it begins to automatically pull the paper through.

## Reversing the Printer to Clear a Ticket Jam

You can now reverse the printer to allow you to clear a print jam:

**1** Access the Driver Menu by pressing the **Wayfarer** key 

**2** Select **Printer Menu**

**3** Press and hold **Printer Reversing**