


Way6 Ticket Machine

The new ticket machines should be largely familiar to you: there are a few small changes to where you find tickets, and it is now easier to access and change the ticket roll. This guide details the changes.


Ticket Menus

The Ticket Menus now use colour to help you find ticket menus, and can be navigated by scrolling right or left – a bit like on a phone:

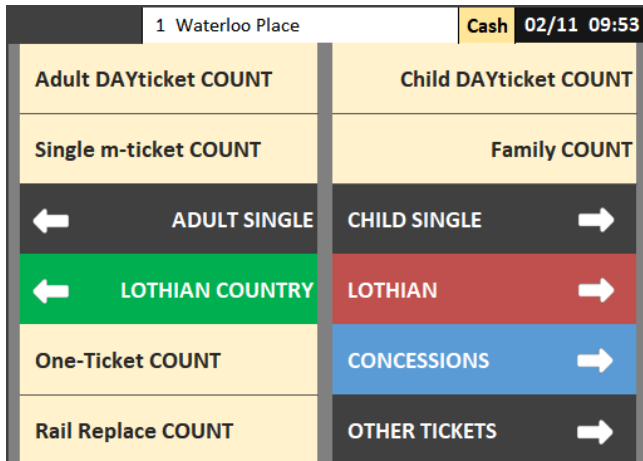


MAIN MENU

The most frequently used counts, as well as Single Ticket, Day Ticket (Lothian Country and Lothian), and Concession menus.

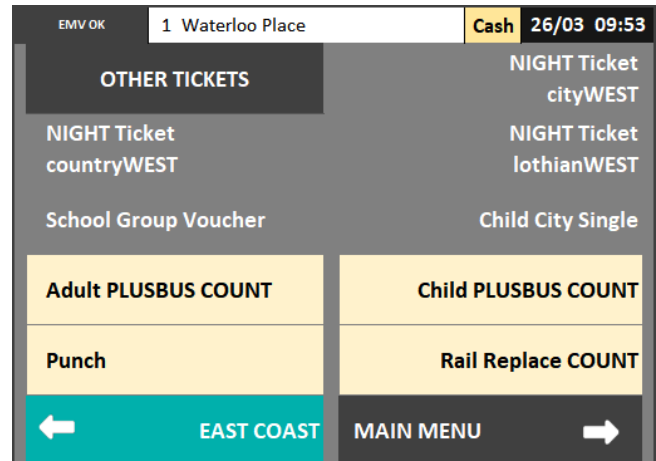

OTHER TICKETS

Less frequently used tickets/counts, as well as a menu to East Coast Day Tickets.

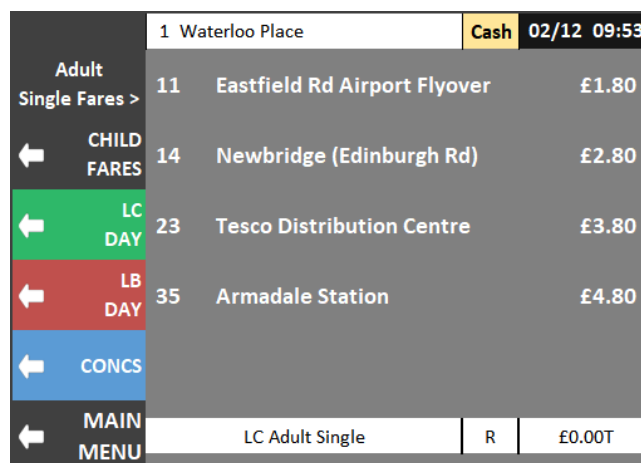

ADULT SINGLE MENU

If you need to restart the ticket machine, press and hold the Wayfarer Reset switch for at least 30 sec – or until the display and lights turn off. The ticket machine will then restart.

Changing the Ticket Roll

The ticket roll is now accessed from above, just press the PARKEON lid release button above the screen. To change a ticket roll follow the instructions below:

1 Release the paper by sliding the locking lever to the right, and then carefully pull the paper out of the printer.

2 To remove the old ticket roll, push it away from you until the square peg is released. Then pull up.

3 Insert the new ticket roll with the square hole nearest you.

4 Push the ticket roll down against the round spring-loaded peg. Check the square peg is lined up with the square hole before releasing.

5 Slide the paper into the printer until it begins to automatically pull the paper through.

Reversing the Printer to Clear a Ticket Jam

You can now reverse the printer to allow you to clear a print jam:

1 Access the Driver Menu by pressing the **Wayfarer** key

2 Select **Printer Menu**

3 Press and hold **Printer Reversing**